


KBD5000 Controls

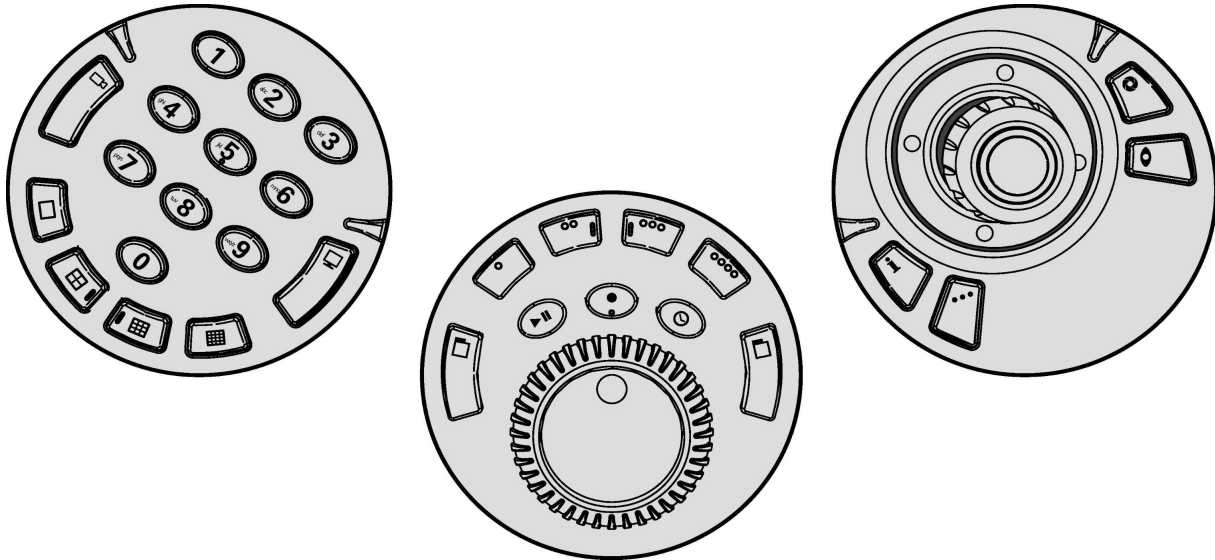

Button Colors: When selecting preferences or options, a green button confirms your choice and a red button cancels it.

Jog: Turn clockwise to advance frames and counterclockwise reverse frame. In dialog boxes, turn counterclockwise to backspace.

Shuttle: Turn clockwise to engage fast forward and counterclockwise to engage fast reverse. The rotation angle increases or decreases the playback speed.

Joystick Button: Enter PTZ mode; submit date/time selection; when in playback mode, press to lock the playback speed. Cancels the camera-call-up dialog, if open.

Joystick Directional Controls: navigate the interface. When in PTZ mode, use the joystick to pan and tilt cameras.

Joystick Twist: Zoom while in PTZ mode. When in Iris or Focus modes, twist to adjust iris or focus.

0-9	Enter camera number, monitor number, or playback time. Enter 0 to disconnect a stream in the camera call-up dialog.		Create bookmark		In PTZ Mode: Toggle iris on/off. Twist the joystick to adjust the iris. Not in PTZ Mode: Toggles sync playback for the active tab.
	Select camera (indicated by Numbers). When using the Call Up Camera/Time dialog, press to select camera by ID.		Take snapshot		When in PTZ mode, toggles focus on/off; twist the joystick to adjust focus.
	Select monitor by number		Play/Pause		Press when in PTZ or Playback modes to escape the current cell and navigate the workspace. Hold to access keyboard shortcut information.
	Toggle 1 x 1 layout		Inactive		Engage home preset. Input a preset number, press to engage a preset for the selected camera.
	Toggle 2 x 2 layout; use with number input to select a cell by number		Toggles the time/date selector. Input a time and then press to engage playback at the specified 24-hour time.		Previous camera (by ID)
	Toggle 3 x 3 layout				Next camera (by ID)
	Toggle 4 x 4 layout				Last viewed camera
					Engage full-screen mode