

SpaceMouse Pro Controls



1: N/A

2: Last camera used

3: Previous Camera (by ID)

4: Next Camera (by ID)

Esc: Close Iris


Ctrl: Open Iris


Shift: Focus in


Alt: Focus out


Menu: Toggle playback mode

 Add bookmark

 Take a snapshot

 Toggle PTZ Mode; "Go" when using the date/time selector

 Open the date/time selector

 Send a camera to its "home" position (preset 1)

Fit: Open the selected cell in full screen view

Joystick Controls: The joystick moves directionally and twists; each action performs a different function depending on your viewing mode. Press down on the joystick when in PTZ or Playback modes to escape the current cell and navigate the workspace without exiting PTZ or Playback in the current cell.

Directional Controls

- **Navigation Mode:** Move between cells.
- **PTZ:** Pan and tilt the selected camera.
- **Mapping:** Move around the map.
- **Playback:** Move the joystick left or right to pause video and rewind or advance video frame by frame. Move the joystick up to play back video at normal speed or down to pause video.

Twist Controls

- **PTZ:** Zoom in or out.
 - **Iris Control:** Hold while twisting to open or close the iris.
 - **Focus Control:** Hold F while twisting for manual focus control.
- **Mapping:** Zoom the map in or out.
- **Playback:** Engage fast-forward or fast-reverse playback. Twist again or twist and hold to increase playback speed.